

Installation Instructions



FlashLink Data Manager Software Download and Installation

FlashLink Data Manager automatically creates an Adobe® PDF report from the information recorded on any FlashLink data logger. Once installed on your Windows PC, it runs in the background and automatically detects when a logger is connected to the USB port. The FlashLink Mini, FlashLink VU and FlashLink CT -80°C Loggers require the FlashLink 8-Pin to USB High Speed Adapter. Reports are stored on the PC as PDF and CSV files, which can be emailed or printed for permanent record-keeping, audits and verification of compliance.

1. Open a web browser and go to **www.deltatrak.com** website.
2. Locate the main menu at the top of the web page under the DeltaTrak company logo and then select **Support** in the menu.
3. Scroll down to **Software and Drivers** in the menu and click this selection.
4. Select your geographic location on the map shown.
5. Scroll down to **FlashLink Data Manager - Free**, then click on the image of the logger you're using. Click the software download button (for 8-pin loggers, choose to **Download Software Only**, or order an **8-Pin to USB Adapter** with your software download).
6. Fill out the form and click on the **Submit** button at the bottom of the form.
7. On the next screen, please take note of the phone number for Technical Support and click on **Download** in the center of the screen.
8. On the next screen, select the location where you will save the download file and click **Save** to start your download.
9. When the download is completed, navigate to the location on your computer where you saved the download file.
10. Double click the **FlashLinkManager.zip** file. A new window will open.
11. Right click the **FlashLink Setup.exe** file and select **Run as administrator**.
12. When the Welcome screen is displayed, the installation process will guide you through the remaining steps for the software installation.
13. During the installation, if the **Enter License** screen appears, click **Cancel** to run the software in free **FlashLink Data Manager** mode.
14. The software will run in the background, and become active when a compatible logger is inserted in the USB port.
15. Right-click on the **FlashLink** icon in the system tray to select **Options, Data Analysis, About, Update, or Exit**.

Help File

Please read the **Help** file before getting started. The Help system can be accessed by a single right click on the FlashLink icon in the system tray and selecting **About** from the pull down menu.

Operating System Requirements

Windows 10, Windows 7, 32 bit or 64 bit computers.

Hardware Requirements

1 gigahertz (GHz) or faster 32-bit (x86) or 64-bit (x64) processor

1 gigabyte (GB) RAM (32-bit) or 2 GB RAM (64-bit)

Device Compatibility

Any FlashLink Data loggers.

Other Software Requirements

Adobe Acrobat Reader 8.0 or greater

